

C&C CarWorx Corp. 400 Market Ind. Park • #19 Wappingers Falls, NY 12590 • USA 1-888-CAR-WORX (227-9679)

GUIDE TO GRILLE INSTALLATIONS

3-GRILLE SET: HOOD SCOOP, UPPER & LOWER INSERTS

HOOD SCOOP

SUBARU IMPREZA WRX STI 2015-16-17 HOOD SCOOP INSERT (SUB-1738)



Picture #1:
Our Project Subaru Impreza Needing a GrillCraft Grille.



Picture #2:
Under the hood, you'll need to partially-remove the sound dampener by removing the upper clips holding it in place.



Picture #3:
Use a plastic pry-tool or flat blade screw driver to remove the clips.



Picture #4:
Underneath the sound dampener, Remove the associated clips and nuts holding the hood scoop to the hood. Pointed to with yellow arrows.



Picture #5:
Once all hardware is removed, pinch the center clip in the image to lift the hood scoop away from the hood.



Picture #6:
With the Hood Scoop removed from the vehicle, place the mesh insert through the front.



Picture #7:
Note the insert sits at a slight angle with the top of the grille behind the top edge of the scoop.



Picture #8:
The side tabs sit flush with the edge of the hood scoop, and the center sits about a 3/16" away from the edge.



Picture #9:
Using a sharp scribe tool, mark the locations of the mounting tabs.

The information contained in this document is meant as helpful guidance only and is subject to change without notice. You are welcome to call, write or email us for more information at any time. Thank you for your interest in our products. This document was published 11/03/14.

C&C CarWorx Corp. is not in any manner authorized or approved by or connected with Subaru of America, Fuji Heavy Industries, Ltd. or Toyota Motor Corporation and does not sell genuine or authorized Subaru or Toyota original equipment manufacturing (OEM) parts. Toyota, Tacoma, Tundra, X-Runner and Scion FR-S are registered trademarks owned by Toyota Motor Corporation.

C&C CarWorx Corp. 400 Market Ind. Park • #19 Wappingers Falls, NY 12590 • USA 1-888-CAR-WORX (227-9679)

GUIDE TO GRILLE INSTALLATIONS

3-GRILLE SET: HOOD SCOOP, UPPER & LOWER INSERTS

SUBARU IMPREZA WRX STI 2015-16-17 HOOD SCOOP INSERT (SUB-1738)

Page 2




Picture #10:
With the mounting points marked, use a 3/16" drill-bit to drill the necessary mounting holes.



Picture #11:
Re-install the mesh insert back into the hood scoop.



Picture #12:
Locate the included hardware.

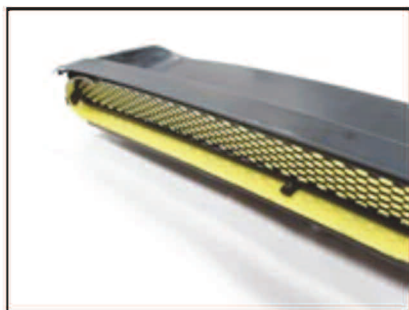

Picture #13:
Place the screws through the tabs of the mesh insert.



Picture #14:
Install a flat-nut on the opposite end of the screw.



Picture #15:
Once all flat nuts are in place, tighten them being sure not to strip the screws.



Picture #16:
Reinstall back onto vehicle and installation is complete. Shown here with our Black MX Series Upper & Lower Grille Kits.



Picture #17:
Shown here with our Silver MX Series Upper & Lower Grille Kits.

The information contained in this document is meant as helpful guidance only and is subject to change without notice. You are welcome to call, write or email us for more information at any time. Thank you for your interest in our products. This document was published 11/03/14.

C&C CarWorx Corp. is not in any manner authorized or approved by or connected with Subaru of America, Fuji Heavy Industries, Ltd. or Toyota Motor Corporation and does not sell genuine or authorized Subaru or Toyota original equipment manufacturing (OEM) parts. Toyota, Tacoma, Tundra, X-Runner and Scion FR-S are registered trademarks owned by Toyota Motor Corporation.

C&C CarWorx Corp. 400 Market Ind. Park • #19 Wappingers Falls, NY 12590 • USA 1-888-CAR-WORX (227-9679)

GUIDE TO GRILLE INSTALLATIONS

3-GRILLE SET: HOOD SCOOP, UPPER & LOWER INSERTS

UPPER GRILLE

SUBARU IMPREZA WRX STI 2015-16-17 UPPER GRILLE INSERT (SUB-1739)




Picture #1:
Our Project Subaru Impreza Needing a GrillCraft Grille.




Picture #2:
To perform the install you'll need to remove the bumper from the vehicle. Start by removing the 10mm bolts and Plastic Clips holding the upper part of the bumper.




Picture #3:
Once the bolts and clips are removed, the metal reinforcement bar comes right off.

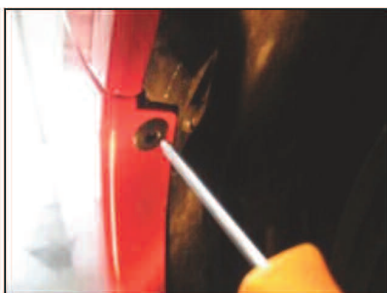

Picture #4:
In the wheel-wells, you'll need to remove the upper clip holding the bumper by pushing the center of the clip inward.

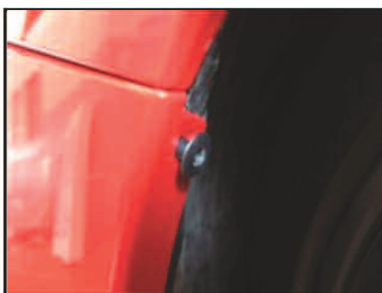

Picture #5:
Once the center is pushed in, will the clip come out.

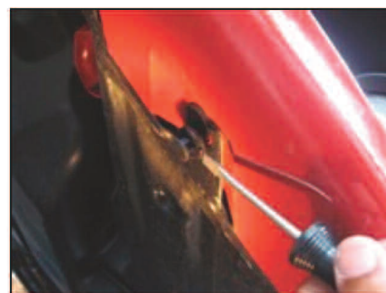

Picture #6:
Underneath the bumper, remove the clips holding the bumper cover to the lower plastics.



Picture #7:
Once all hardware is removed, you can unclip the bumper from the vehicle by pulling towards you from the wheel-well as well as underneath the bumper.



Picture #8:
Disconnect the bumper-lights by pushing the center-tab inward.



Picture #9:
The bumper should be fully detached from the vehicle.

The information contained in this document is meant as helpful guidance only and is subject to change without notice. You are welcome to call, write or email us for more information at any time. Thank you for your interest in our products. This document was published 11/03/14.

C&C CarWorx Corp. is not in any manner authorized or approved by or connected with Subaru of America, Fuji Heavy Industries, Ltd. or Toyota Motor Corporation and does not sell genuine or authorized Subaru or Toyota original equipment manufacturing (OEM) parts. Toyota, Tacoma, Tundra, X-Runner and Scion FR-S are registered trademarks owned by Toyota Motor Corporation.

GUIDE TO GRILLE INSTALLATIONS

3-GRILLE SET: HOOD SCOOP, UPPER & LOWER INSERTS

SUBARU IMPREZA WRX STI 2015-16-17 UPPER GRILLE INSERT (SUB-1739)

Page 4




Picture #10:

You'll need to remove the upper grille shell from the bumper by unscrewing the Phillips screws along the perimeter.



Picture #11:

Use a flat-blade screwdriver to release the clips holding the grille shell in place.

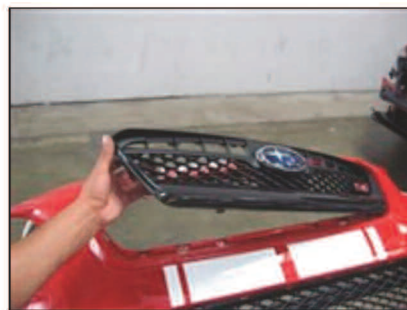

Picture #12:

Once all removed, the grille shell will come right out from the front of the bumper.



Picture #13:

Place your new mesh insert into the bumper opening.



Picture #14:

Using a sharp scribe tool, mark the locations of the mounting tabs through the grille.



Picture #15:

Use a 3/16" drill bit to make the necessary mounting holes.



Picture #16:

We recommend painting the area behind the grille BLACK to give a clean, professional installation. To do this trace the back of the grille and tape it off in preparation for painting.



Picture #17:

Another view of the taped section.



Picture #18:

Another view of the taped section.

C&C CarWorx Corp. 400 Market Ind. Park • #19 Wappingers Falls, NY 12590 • USA 1-888-CAR-WORX (227-9679)

GUIDE TO GRILLE INSTALLATIONS

3-GRILLE SET: HOOD SCOOP, UPPER & LOWER INSERTS

SUBARU IMPREZA WRX STI 2015-16-17 UPPER GRILLE INSERT (SUB-1739)

Page 5



Picture #19:

Once painted the bumper should look like shown.



Picture #20:

Another view of the painted section.



Picture #21:

Another view of the painted section.



Picture #22:

Locate the included hardware



Picture #23:

On the bottom tab of the grille, attach the provided U-Clip. Smooth side faces downward.



Picture #24:

Place the mesh insert back into the bumper opening.



Picture #25:

The top tab utilizes the 1" Hex Screw and mounts through the upper plastic reinforcement on the bumper.



Picture #26:

The side tabs attach as shown with the flat-nuts opposite to the hex-screw.



Picture #27:

The lower screw will attach as shown through the bumper into the previously attached U-Nut.

The information contained in this document is meant as helpful guidance only and is subject to change without notice. You are welcome to call, write or email us for more information at any time. Thank you for your interest in our products. This document was published 11/03/14.

C&C CarWorx Corp. is not in any manner authorized or approved by or connected with Subaru of America, Fuji Heavy Industries, Ltd. or Toyota Motor Corporation and does not sell genuine or authorized Subaru or Toyota original equipment manufacturing (OEM) parts. Toyota, Tacoma, Tundra, X-Runner and Scion FR-S are registered trademarks owned by Toyota Motor Corporation.

C&C CarWorx Corp. 400 Market Ind. Park • #19 Wappingers Falls, NY 12590 • USA 1-888-CAR-WORX (227-9679)

GUIDE TO GRILLE INSTALLATIONS

3-GRILLE SET: HOOD SCOOP, UPPER & LOWER INSERTS

SUBARU IMPREZA WRX STI 2015-16-17 UPPER GRILLE INSERT (SUB-1739)

Page 6



Picture #28:

Reinstall the bumper back onto vehicle and installation is complete. Shown here with our Black MX Series Upper, Lower & Hood Scoop Grille Kits.



Picture #29:

Shown here with our Silver MX Series Upper, Lower & Hood Scoop Grille Kits.

The information contained in this document is meant as helpful guidance only and is subject to change without notice. You are welcome to call, write or email us for more information at any time. Thank you for your interest in our products. This document was published 11/03/14.

C&C CarWorx Corp. is not in any manner authorized or approved by or connected with Subaru of America, Fuji Heavy Industries, Ltd. or Toyota Motor Corporation and does not sell genuine or authorized Subaru or Toyota original equipment manufacturing (OEM) parts. Toyota, Tacoma, Tundra, X-Runner and Scion FR-S are registered trademarks owned by Toyota Motor Corporation.

C&C CarWorx Corp. 400 Market Ind. Park • #19 Wappingers Falls, NY 12590 • USA 1-888-CAR-WORX (227-9679)

GUIDE TO GRILLE INSTALLATIONS

3-GRILLE SET: HOOD SCOOP, UPPER & LOWER INSERTS

LOWER GRILLE

SUBARU IMPREZA WRX STI 2015-16-17 LOWER GRILLE INSERT (SUB-1740)




Picture #1:
Our Project Subaru Impreza Needing a GrillCraft Grille.




Picture #2:
To perform the install you'll need to remove the bumper from the vehicle. Start by removing the 10mm bolts and Plastic Clips holding the upper part of the bumper.



Picture #3:
Once the bolts and clips are removed, the metal reinforcement bar comes right off.

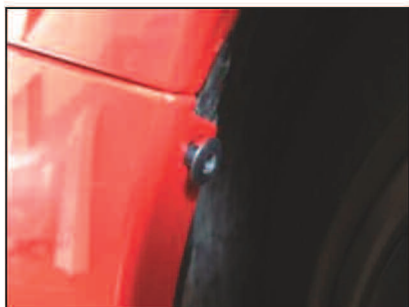

Picture #4:
In the wheel-wells, you'll need to remove the upper clip holding the bumper by pushing the center of the clip inward.

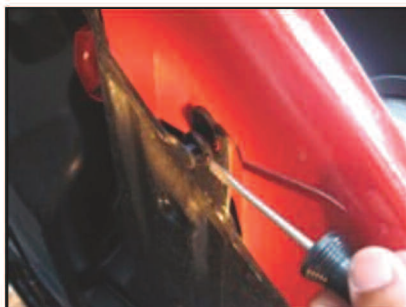

Picture #5:
Underneath the bumper, remove the clips holding the bumper cover to the lower plastics.



Picture #6:
Once all hardware is removed, you can unclip the bumper from the vehicle by pulling towards you from the wheel-well as well as underneath the bumper.



Picture #7:
Disconnect the bumper-lights by pushing the center-tab inward.



Picture #8:
The bumper should be fully detached from the vehicle.



Picture #9:
Place the new mesh insert into the lower bumper opening.

The information contained in this document is meant as helpful guidance only and is subject to change without notice. You are welcome to call, write or email us for more information at any time. Thank you for your interest in our products. This document was published 11/03/14.

C&C CarWorx Corp. is not in any manner authorized or approved by or connected with Subaru of America, Fuji Heavy Industries, Ltd. or Toyota Motor Corporation and does not sell genuine or authorized Subaru or Toyota original equipment manufacturing (OEM) parts. Toyota, Tacoma, Tundra, X-Runner and Scion FR-S are registered trademarks owned by Toyota Motor Corporation.


C&C CarWorx Corp. 400 Market Ind. Park • #19 Wappingers Falls, NY 12590 • USA 1-888-CAR-WORX (227-9679)

GUIDE TO GRILLE INSTALLATIONS

3-GRILLE SET: HOOD SCOOP, UPPER & LOWER INSERTS

SUBARU IMPREZA WRX STI 2015-16-17 LOWER GRILLE INSERT (SUB-1740)

Page 8

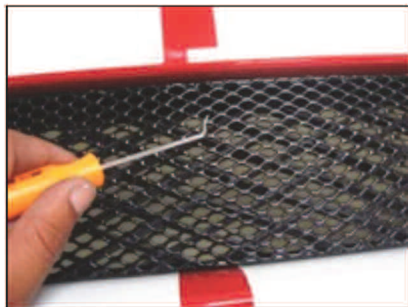


Picture #10:
Using a sharp scribe tool, mark the locations of the mounting tabs.



Picture #11:
Use a 3/16" Drill Bit to drill the holes at the mounting locations.



Picture #12:
Use a 3/16" Drill Bit to drill the holes at the mounting locations.

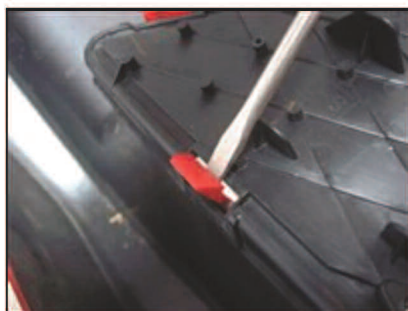

Picture #13:
Now remove the factory lower plastic insert by releasing the tabs along its perimeter.



Picture #14:
Once all tabs are released, the insert comes right off.



Picture #15:
Locate the included hardware.



Picture #16:
With the mesh insert back in place, use the included hardware to mount the insert in place.



Picture #17:
With the mesh insert back in place, use the included hardware to mount the insert to the bumper.



Picture #18:
The top tab is notched when drilled; this is to secure the mesh to the bumper without risk of tearing the plastic tab.

The information contained in this document is meant as helpful guidance only and is subject to change without notice. You are welcome to call, write or email us for more information at any time. Thank you for your interest in our products. This document was published 11/03/14.

C&C CarWorx Corp. is not in any manner authorized or approved by or connected with Subaru of America, Fuji Heavy Industries, Ltd. or Toyota Motor Corporation and does not sell genuine or authorized Subaru or Toyota original equipment manufacturing (OEM) parts. Toyota, Tacoma, Tundra, X-Runner and Scion FR-S are registered trademarks owned by Toyota Motor Corporation.

C&C CarWorx Corp. 400 Market Ind. Park • #19 Wappingers Falls, NY 12590 • USA 1-888-CAR-WORX (227-9679)

GUIDE TO GRILLE INSTALLATIONS

3-GRILLE SET: HOOD SCOOP, UPPER & LOWER INSERTS

SUBARU IMPREZA WRX STI 2015-16-17 LOWER GRILLE INSERT (SUB-1740)

Page 9



Picture #19:

The hardware will clamp the mesh insert to the bumper, making it impossible to remove without unscrewing.



Picture #20:

Reinstall the bumper back onto vehicle and installation is complete. Shown here with our Black MX Series Upper, Lower & Hood Scoop Grille Kits.



Picture #21:

Shown here with our Silver MX Series Upper, Lower & Hood Scoop Grille Kits.

The information contained in this document is meant as helpful guidance only and is subject to change without notice. You are welcome to call, write or email us for more information at any time. Thank you for your interest in our products. This document was published 11/03/14.

C&C CarWorx Corp. is not in any manner authorized or approved by or connected with Subaru of America, Fuji Heavy Industries, Ltd. or Toyota Motor Corporation and does not sell genuine or authorized Subaru or Toyota original equipment manufacturing (OEM) parts. Toyota, Tacoma, Tundra, X-Runner and Scion FR-S are registered trademarks owned by Toyota Motor Corporation.