

GUIDE TO GRILLE INSTALLATIONS

HOOD SCOOP

SUBARU IMPREZA WRX STI 2015-16-17 HOOD SCOOP INSERT (SUB-1738)



Picture #1:
Our Project Subaru Impreza Needing a GrillCraft Grille.



Picture #2:
Under the hood, you'll need to partially-remove the sound dampener by removing the upper clips holding it in place.



Picture #3:
Use a plastic pry-tool or flat blade screw driver to remove the clips.



Picture #4:
Underneath the sound dampener, Remove the associated clips and nuts holding the hood scoop to the hood. Pointed to with yellow arrows.



Picture #5:
Once all hardware is removed, pinch the center clip in the image to lift the hood scoop away from the hood.



Picture #6:
With the Hood Scoop removed from the vehicle, place the mesh insert through the front.



Picture #7:
Note the insert sits at a slight angle with the top of the grille behind the top edge of the scoop.



Picture #8:
The side tabs sit flush with the edge of the hood scoop, and the center sits about a 3/16" away from the edge.



Picture #9:
Using a sharp scribe tool, mark the locations of the mounting tabs.

The information contained in this document is meant as helpful guidance only and is subject to change without notice. You are welcome to call, write or email us for more information at any time. Thank you for your interest in our products. This document was published 11/03/14.

C&C CarWorx Corp. is not in any manner authorized or approved by or connected with Subaru of America, Fuji Heavy Industries, Ltd. or Toyota Motor Corporation and does not sell genuine or authorized Subaru or Toyota original equipment manufacturing (OEM) parts. Toyota, Tacoma, Tundra, X-Runner and Scion FR-S are registered trademarks owned by Toyota Motor Corporation.

GUIDE TO GRILLE INSTALLATIONS

SUBARU IMPREZA WRX STI 2015-16-17 HOOD SCOOP INSERT (SUB-1738)

Page 2




Picture #10:
With the mounting points marked, use a 3/16" drill-bit to drill the necessary mounting holes.



Picture #11:
Re-install the mesh insert back into the hood scoop.



Picture #12:
Locate the included hardware.

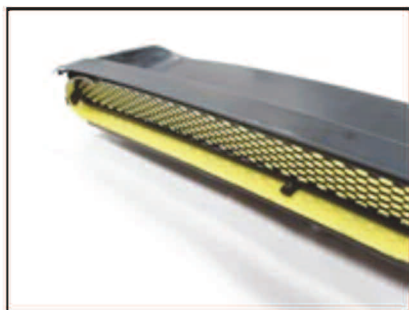

Picture #13:
Place the screws through the tabs of the mesh insert.



Picture #14:
Install a flat-nut on the opposite end of the screw.



Picture #15:
Once all flat nuts are in place, tighten them being sure not to strip the screws.



Picture #16:
Reinstall back onto vehicle and installation is complete. Shown here with our Black MX Series Upper & Lower Grille Kits.



Picture #17:
Shown here with our Silver MX Series Upper & Lower Grille Kits.