

SUB-1721

- (2) #8 X 5/8 PHILIP SCREWS
- (2) #8 "FLAT" NUTS



SUB-1721 - SUBARU IMPREZA MX SERIES HOOD SCOOP GRILLE INSTALLATION DETAILS

1




THE FIRST STEP IS TO REMOVE THE HOOD SCOOP. THE HOOD SCOOP VERTICAL SUPPORTS MUST BE SLIGHTLY NOTCHED USING A ROUND FILE IN ORDER TO FIT THE GRILLE FLUSH INTO THE HOOD SCOOP OPENING.



NOTE: FILED NOTCH IN THE VERTICAL SUPPORT

2

3

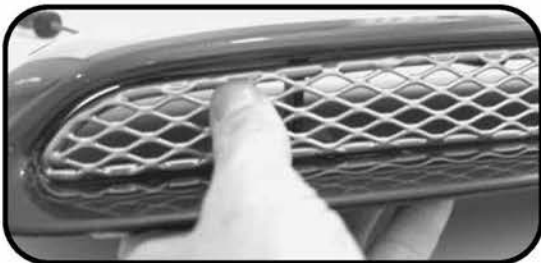


PLACE SPORT GRILLE INTO SCOOP OPENING AND HOLD FIRMLY IN PLACE..



FROM THE BACKSIDE MARK THE MOUNTING TAB CENTER HOLES.

4

5

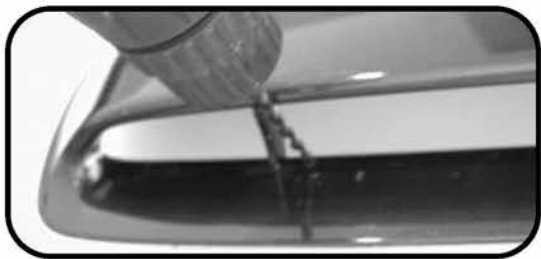

USING A 3/16 DRILL BIT DRILL FOR MOUNTING SCREWS.



FASTEN THE GRILLE USING SUPPLIED MOUNTING HARDWARE AS SHOWN.

6